




LOG DEBARKER

www.trioagri.com

Chainsaw Mounted Bark Peeling Attachment

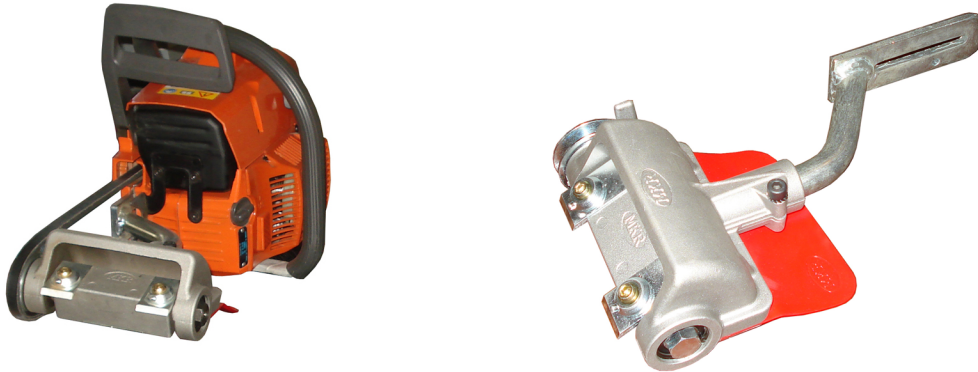

INSTALLATION of the BLADES to the APPARATUS

The blades are sharp. Please wear gloves when handling them!!

The blades should be sharp and well-adjusted to have the apparatus performing smoothly. To adjust the blades, use the Allen wrench and sheet-metal Gauge which are available in the case. Position the sheet-metal Gauge against the back of the sharpened side of the blade aligning the blade's notch to the Gauge and tighten the blade's fixing screw. Adjust all four blades in this way and recheck for tightness. If the logs have thick bark make the adjustment using the thick (14mm.) gauge. If they have thin bark then use the small (12mm.) gauge. Check and retighten the fixing screws after a short initial period of use. The blades can be sharpened using whetstones. The sharpening angle should be 40°.

When attaching the Debarker to the saw the Main Body it should be seated onto the Carrier Arm to the line on it.

The V belt should be taut but not too tight or too loose .

When adjusting the blades, the gudgeon of the blade washer (blade washer is placed under the blade's fixing screw) should be at the front.

Lubricate the bearings next to the blade joint body every day.

SAFE USE of the APPARATUS

The Debarker is used only for bark peeling and planning. Please refer to these operating instructions to avoid risk of injury. The operator must be trained in the safe use of the chainsaw and must wear Personal Protective Equipment(PPE) for chainsaw users. The work area must be clear of obstructions with sound footing to avoid tripping. No other persons should be in the work area. Start the chainsaw and apply the debarker to the log body, using only pulling strokes rather than pushing. Pull slowly when working on thick bark and faster on thinner barks. When debarking the log, work from right to left keeping the belt side of the debarker to the peeled part of the log.